

## For Android TV released in 2015

If you are using this type of remote control, follow the steps below.



1. Unpair the Voice command remote control (Touchpad Remote Control) from the TV.
  1. Using the supplied remote, press the **HOME** button.
  2. Select **Settings**.
  3. Select **Bluetooth setting** in the **Network & Accessories** category.
  4. Select **Device list**.
  5. Select **SONY TV REMOTE 001**.
  6. Select **Unpair**.
  7. Select **OK**.
2. Re-pair the Voice command remote control (Touchpad Remote Control) to the TV.
  1. Using the supplied remote, press the **HOME** button.
  2. Select **Settings**.
  3. Select **Touchpad Remote Control settings** in the **Network & Accessories** category.
  4. Select **Pair Touchpad Remote Control**.
  5. Follow the on-screen instructions.