


For Android TV™ released in 2016 or later




If you are using this type of remote control, follow these steps:



1. Unpair the Voice command remote control from the TV:

1. Press the **HOME** button on the remote.
2. Select  **Settings**.
3. The next steps will depend on your TV menu options:
 - Select **Remotes & Accessories** — **Bluetooth Settings** — **SONY TV RC MIC 001** or **SONY TV VRC 001** — **Unpair** — **OK**.
 - Select **Bluetooth settings** — **SONY TV RC MIC 001** or **SONY TV VRC 001** — **Unpair** — **OK**.

2. Re-pair the Voice command remote control to the TV:

1. Press the **HOME** button on the remote.
2. Select  **Settings**.
3. The next steps will depend on your TV menu options:
 - Select **Remotes & Accessories** — **Remote control** — **Connect via Bluetooth** or **Activate**  **button**.
 - Select **Remote control** — **Connect via Bluetooth**.
 - Select **Voice Remote Control** — **Activate**  **button**.

4. Follow the on-screen instructions.

NOTE: Pairing can fail if the battery level is too low. If this is the case, replace the batteries with new ones before attempting to pair again.