



- ↶⏻⏮⏭⏴⏵⏶⏷ **(Input select/Text hold)**
 In TV mode: Press to select the connected device input.
 In Text mode: Press to hold the current page.
- |/⏻ **(TV standby)**
 Press to turn on or to turn off the TV (standby mode).
- CC **(Subtitle setting)**
 Press to turn subtitles on or off (when the feature is available).
- AUDIO**
 Press to change the dual sound mode.
 For digital mode, press to change the language for the programme currently being viewed.
- SYNC MENU**
 Press to display the BRAVIA Sync Menu to operate a connected BRAVIA Sync-compatible device.
- RELATED SEARCH**
 When the TV is connected to the Internet, you can search for related content while watching various content on the TV. (What you can search depends on your region/country or other circumstances.)
- TV PAUSE**
 Press to pause the currently viewing programme.



- **Buttons for connected devices**

Use these buttons to operate a connected BRAVIA Sync-compatible device and/or a USB HDD device.

- **TITLE LIST**

Press to display the Title list.

- **REC**

Press to record the current programme with the USB HDD recording function.

- **Colour buttons**

When the colour buttons are available, an operation guide appears on the screen.

Follow the operation guide to perform a selected operation.

- **SOCIAL VIEW**

You can enjoy watching TV with friends far and near, using social network services.

- **FOOTBALL**

Press to change the Live Football Mode.

Middle



- **DISCOVER**

Press to bring up Discover to search for content.

- **SEN/APPS**

Press to open the Apps category of the Home Menu.

- **GUIDE**

Press to display the digital programme guide.

The Guide feature may not be available in some regions/countries.

- **▲/▼/◀/▶/⊕/RETURN**

Press to select/confirm a highlighted item and return to the previous screen, or exit from a menu.

- **OPTIONS**

Press to display a list of convenient functions and menu shortcuts. The menu items vary based on the current input and/or content.

- **HOME**

Press to display the TV Home Menu.

Lower



- **DIGITAL/ANALOG**

Press to switch between digital and analogue mode.

When viewing pictures from a connected device, press to return to the last viewed TV mode.

- **Info/Text reveal**

Press to display information.

- **i-MANUAL**

Press to display the on-screen instruction manual (this manual).

- **Number buttons**

In TV mode: Press to select channels.

In Text mode: Press to enter a page number.

- **Tw in picture/PIP**







Press to display two pictures simultaneously.

- **Text**

Press to display text information.

Bottom



-  **+/- (Volume)**
Press to adjust the volume.
-  **(Muting)**
Press to mute the sound. Press again to restore the sound.
- **PROG +/-**  
In TV mode: Press to select the next (+) or previous (-) channel.
In Text mode: Press to select the next () or previous () page.
- **3D**
Press to select the 3D display mode.