



2

**1. Panel description**

1. Run mode display
2. Signal sending display
3. Blowing direction display
4. Model code
5. Temperature "+/-" key
6. Mode key
7. Automatic blowing direction control key
8. Power key
9. Fast cool key
10. Timing off key
11. Enter key
12. Clock function key
13. Set key
14. Timing on key
15. Fast heat key
16. Fan key
17. Blowing direction control key
18. Temperature "+/" key
19. Fan display
20. Temperature display

**2. Installing the batteries**

Remove the battery cover of the remote control and install two AA size batteries. Install the battery cover. The time will appear in the left corner of the LCD display.

**3. Set up instructions**

Method A: digital automatic search set up.

- a) Turn on air conditioner and aim the remote control directly at it.
- b) Hold the set key until the code changes in the mode window. Then release it. The system will switch to automatic search and the code will increase with 1 unit every two seconds. Pay attention to the air conditioner. Keep searching until the air conditioner automatically turns on/off. Press the enter key to finish set up.



Method B: direct code setup.

- a) Refer to the CODE FORM and find the number corresponding with your brand. Power on the air conditioner manually. For example: INVCIN is code 188-190.
- b) Hold the set key (for about 3 seconds) until the code flashes in the display. Press temperature "+/" or "-/" until the code you want to choose appears.
- c) Press enter key and the code stops flashing.
- d) Check whether the keys on the remote control work normally. If not, repeat steps b-d until a suitable code is found.

**4. Timing on/off function**

Press timing on key to increase the starting time for the air conditioner by 1 hour. The displayed time is the time when the air conditioner will automatically be switched on. Pressing timing off key will delay the time the air conditioner will be turned off by 1 hour each time the key is pressed. The timing function uses a 15-hour indication to show and set up the time.

3

**5. Fast cool/Fast heat function**

Press the fast cool key to automatically set the air conditioner to 21 °C, middle wind, automatic blowing direction. Or, press the fast heat key to automatically set the air conditioner to 27 °C, middle wind and automatic blowing direction.

**6. Notes**

Make sure the air conditioner is in working order. Be aware that the remote control cannot increase the function of the air conditioner. If the remote control will not be used for a long time, make sure to remove the batteries to prevent damage to the remote control.



**Safety precautions:**  
To reduce risk of electric shock, this product should ONLY be opened by an authorized technician when service is required. Disconnect the product from mains and other equipment if a problem should occur.

**Warranty:**

No guarantee or liability can be accepted for any changes and modifications of the product or damage caused due to incorrect use of this product.

**General:**

Designs and specifications are subject to change without notice.

This product has been manufactured and supplied in compliance with all relevant regulations and directives, valid for all member states of the European Union. It also complies to all applicable specifications and regulations in the country of sales. Formal documentation is available upon request. This includes, but is not limited to: Declaration of Conformity (and product identity), Material Safety Data Sheet, product test report.

Please contact our customer service desk for support.

via website: <http://www.nedis.com/en-us/contact/contact-form.htm>

via e-mail: [service@nedis.com](mailto:service@nedis.com)

via telephone: +31 (0)73-599365 (during office hours)

NEDIS B.V., De Tweeling 28, 5215 MC 's-Hertogenbosch, THE NETHERLANDS

4

**Applicable brand and code list**

BRAND	CODE	BRAND	CODE
AKIRA	796-797	GALANZ	140-149
AUX	180-199	GREE	000,020-039
AUCMA	210-229	GEER	342-343
AIDELONG	293-295	GLEE	280
AITE	296-299	GUQIAO	344
AOLI	300	GUANGDA	345-346
AOKI	301-302	HAIER	001-019
BAIXUE	299	HICON	391-392
BEIJINGJINGDIAN	304	HITACHI	640-659
BODERKA	305-306	HISENSE	230-239
BORLER	307	HONGYI	347
BOSHIGAO	308-309	HUABAO	100-109
BOSHI	310	HUALING	150-169
BIG-THUMB	331	HUAGAO	348
CAIXING	311	HUAWEI	281
CARRIER	690-699	HUAKE	349-350
CHANGLING	312-323	HUAMEI	351-352
CHANGHONG	060-079	HUANGHE	353
CHANGFENG	190	HUIFENG	354-356
CHENGYUAN	324	HUIFENG	357
CHUANGHUA	325-328	HYUNDAI	780-789
CHUNLIAN	170-179	INVCIN	475-483
CHIGO	080-099	JIALE	358
CONROWA	337-341	JIANGNAN	359
CORONA	760-769	JMSTAR	360
CHANGFU	835-838	JINBEIJING	361-362
DAEWOO	332-333	JINDA	491-492
DAIKIN	740-759	JINSONG	363-365
DAJINXING	329-330	JOHNSO	282
DAOTIAN	821-824	KANGLI	368-370
DONGXINBAO	260-268	KELONG	110-119
DONGXIA	334-335	KLIMATAIR	797-800
DUNAN	336	KONKA	366-367
ELECTROLUX	471-474	KRIS	804-805

5

BRAND	CODE	BRAND	CODE
FEILU	240-249	KT02_D001	283
FEIGE	829-830	KT02_D002	284
FRESTECH	270-279	KTY001	285
FUJITSU	700-719	KTY002	286
GOLDSTAR	303	KTY003	287
BRAND	CODE	BRAND	CODE
KTY004	288	SHUJIANGLU	416-418
KTY005	289	SIGMA	447
LIANGYU	780	SOGO	291
LG	600-609	SOVA	292
LITTLESWAN	453	SONGXING	419
LIKEAIR	386-387	SOVA	420
LOREN-SEBO	801-803	SOYEA	421-422
MCQUAY	790-795	SRTC	423
MD	040-059	SUNBURG	817-820
MEILING	389-390	TCL	120-139
MINGXING_BOYIN	290	TECO	831-834
MITSUBISHI	551-599	TIANYUJIAN	425-428
NATIONAL	660-690	TIANJINKONGTIAO	424
NISO	497	TOBO	250-259
NISO	398-399	TONGLI	429-430
NIKKO	810-811	TOSHIBA	630-639
PANSONIC	660-689	TOYO	825-828
PANDA	464-466	TRANE	812-816
PINS HANG, X IN H UABAO	290	UNI-AIR	368-369
QIXING	393	UTTLEDUCK	454-456
RAY BO	371-383	WANBAO	431-433
ROWA	383-385	WEILI	434-443
RICAI	394	WEITELI	444
RIJIANG	395-397	WHIRLPOOL	770-774
SACON	414	WUFENG	445-446
SANZUAN	190	XILENG	448-449
SANYO NEC	500-550	XINLE	457-460
SAMSUNG	610-629	XINLING	461
SAST	450-452	XINGHE	462-463
SERENE	499	YAIR	467-471

6

- This company reserves the right to interpretation of the User's Manual. Design and technical parameters may vary without notice.

7

BRAND	CODE	BRAND	CODE
SHARP	720-739	YAOMA	470
SHAMEI	400	YIDONG	499
SHANKING	401-402	YORK	775-779
SHANGLING	403-409	YUTU	484-490
SHENBAO	410-411	ZHONGYI	493-494
SHENGFENG	412	ZUODAN	495
SHENGFENG/FEILU	413	OTHER	496, 498
SHINING	415		806-809
SHINCO	200-209		839-999

8