



- 1 Press and hold the **BD**, **DVD**, or **AMP** function button you want to programme on the remote, then press . The selected function button (**BD**, **DVD**, or **AMP**) flashes.
- 2 Press the number buttons to enter the manufacturer's code number when the function button flashes. If you do not enter the code within 30 seconds, you need to go back to step 1.
- 3 Press . The selected function button flashes twice. If the selected function button flashes five times, repeat from step 1.
- 4 Turn on your equipment and check that the following main functions work. For Blu-ray disc players, DVD players and DVD/HDD recorders, check: (playback), (stop), (rewind), (fast forward), channel selection. For DVD players and DVD/HDD recorders, check: **TOP MENU/MENU** and .

**If your equipment is not working, or some of the functions do not work**

Enter the correct code or try the next code listed for the brand. Note that the list may not include codes for all models of all brands.

**To return to normal TV operation**

Press the **TV** function button.

## Manufacturer's codes

### DVD players

Manufacturer	Code
SONY	0001, 0024, 0023, 0025, 0038

### Blu-ray disc (BD) players

Manufacturer	Code
SONY	0501 – 0503

### DVD/video cassette recorders

Manufacturer	Code
SONY	0207, 0222

### DVD/HDD recorders

Manufacturer	Code
SONY	0219, 0220, 0221

### VCRs

Manufacturer	Code
SONY	
VTR1:Betamax	1001, 1007, 1010, 1011
VTR2:8mm	1002, 1008
VTR3:VHS	1003, 1009
VTR4:DV	1004
VTR5:DV	1005
VTR6:DV	1006

### DAV Home Theatre System

Manufacturer	Code
SONY (DAV)	4501 – 4506

### AV receivers

Manufacturer	Code
SONY	4001, 4002, 4056, 4057, 4085

### Digital terrestrial receivers

Manufacturer	Code
SONY	3101, 3102